


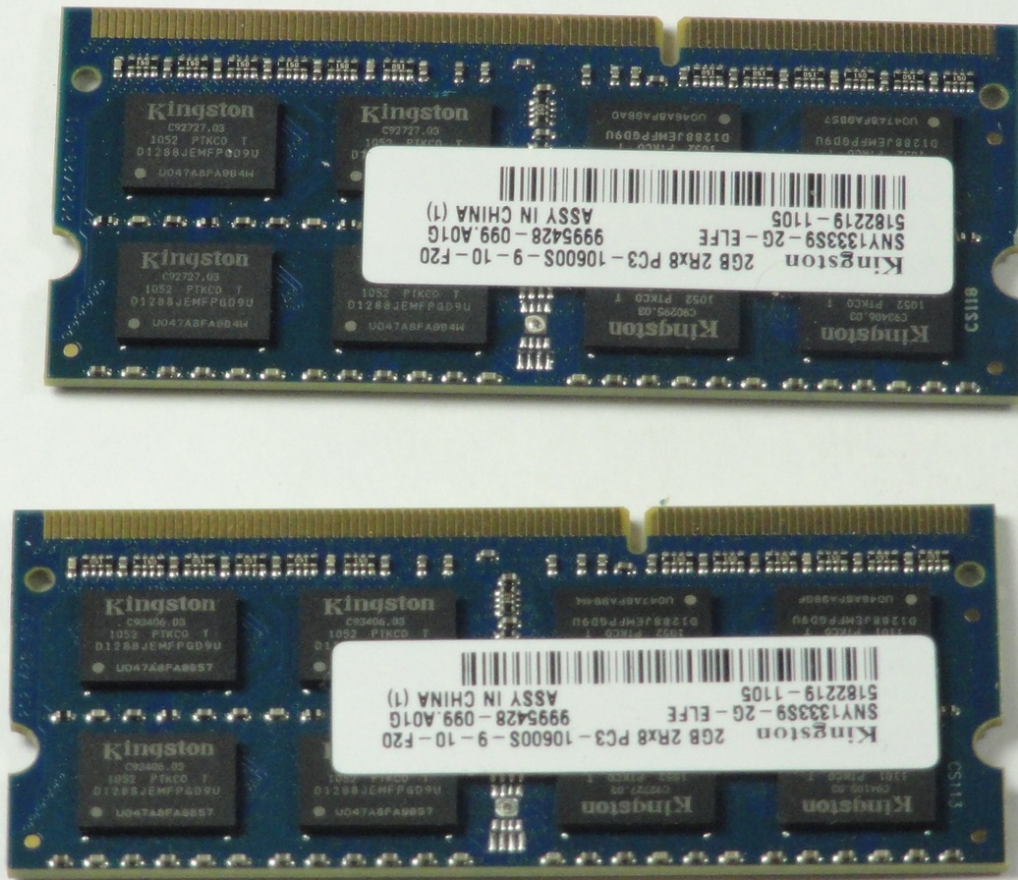

Sony VAIO VPC-EB33FM RAM Replacement

The purpose of this installation guide is to provide instructions on removing and installing the RAM of the Sony VAIO VPC-EB33FM laptop.

Written By: Bret Omsberg



INTRODUCTION

This guide will inform readers on how to safely uninstall the RAM components of the Sony VAIO VPC-EB33FM laptop.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)



PARTS:


- [PC3-10600 2 GB RAM Chip](#) (1)
- [PC3-10600 4 GB RAM Chip](#) (1)

Step 1 — Battery

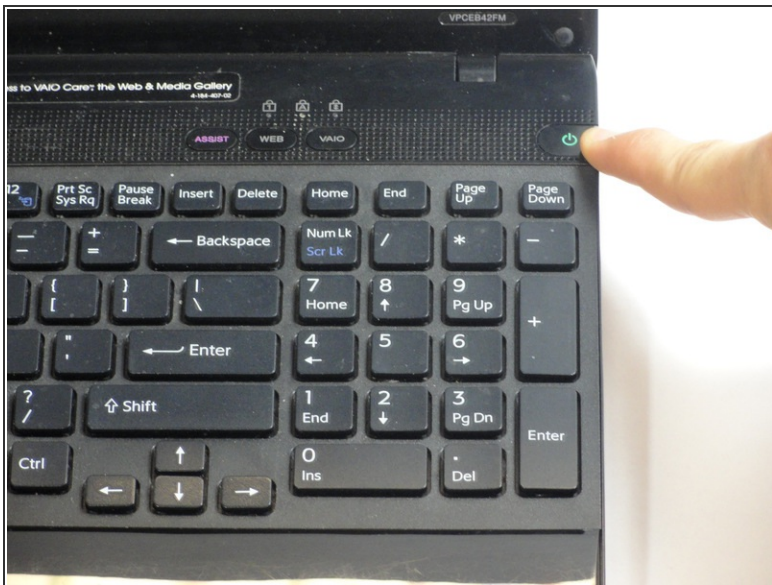

- If the laptop isn't turned off, then do so by holding down the power button.
- Turn the laptop onto its backside.

Step 2

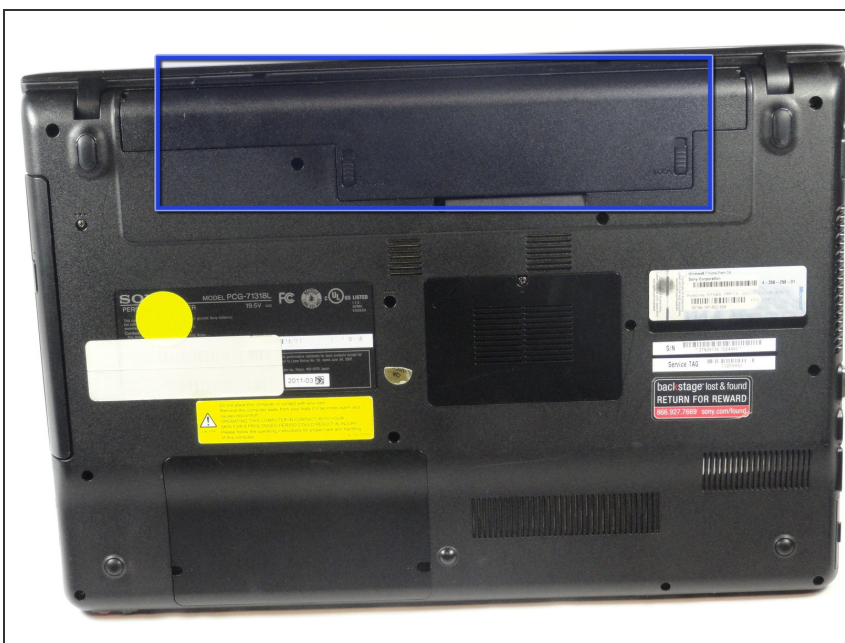

- Locate the battery below the screen attachment.
- ⓘ The battery is shaped as a long rectangle with rounded edges.

Step 3



- Press into the release button while holding the unlock button in position.

Step 4




- Lift the battery out at the notch while holding the release button.

Step 5 — RAM



- Remove the one screw with a Phillips #00 screwdriver.
- ❗ The screw cannot be removed from the RAM casing cover.

Step 6

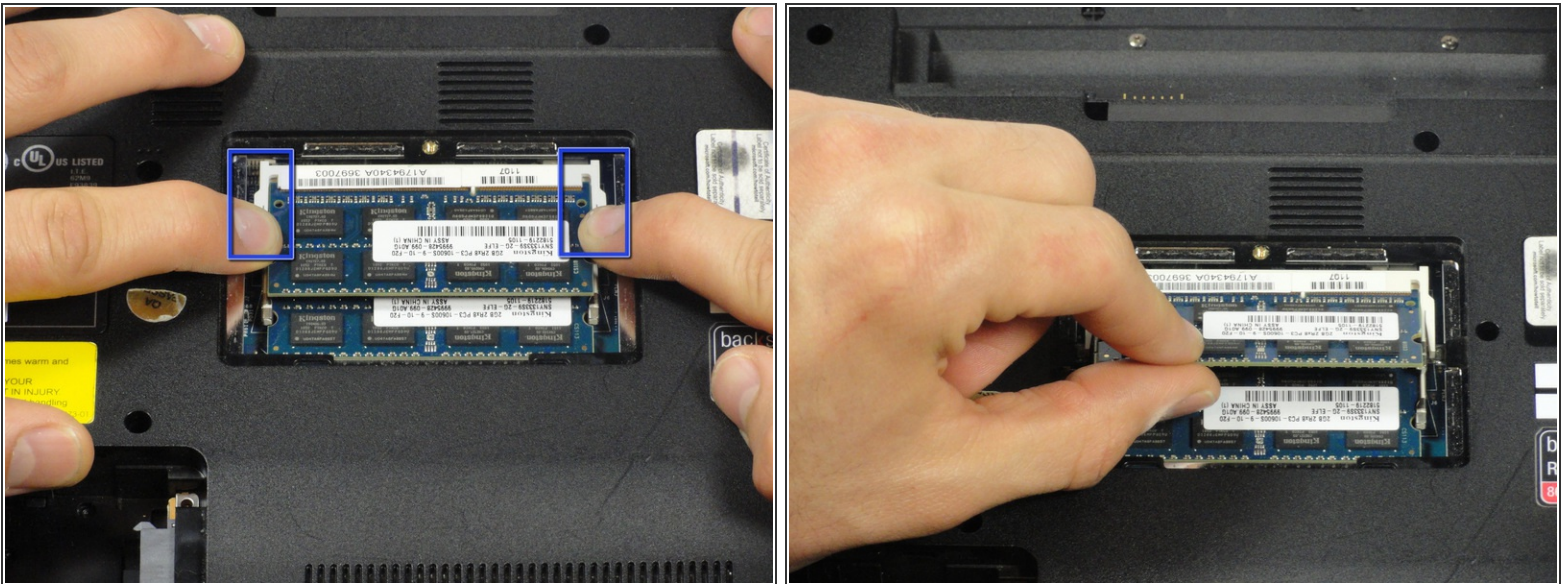

- Pull the two retaining arms away from the center of the RAM chip.
- The RAM will make a "pop" sound and the RAM stick will rise for ease of handling.

Step 7



- Pull the RAM stick out of its socket.
- To remove the second stick of RAM, repeat steps six and seven.
- When installing RAM, make sure sticks are firmly in place or the computer will not register them.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 10:43:40 PM.